

- Ⓓ Art. 1014 Ankerbojen Beleuchtung
- ⒼⒸ Art. 1014 Anchor Buoy Flashing Light
- Ⓕ Art. 1014 Iluminación para la boya
- Ⓔ Art. 1014 Illumination Bouée d'ancre
- Ⓘ Art. 1014 Illuminazione Grippiale



www.swi-tec.com

Turn the cap clockwise rotation
1/2 turn to activate

1.



Turn the cape 1/2 turn counter-clockwise rotation to deactivate

The light flashes automatically just in the dark.

2. Battery Change



Make sure that batteries has contact



2 x AA Batteries

3.

Fix the light on
the SWI-TEC
Anchor Buoy

